



Hole Allocations: 55 holes
(2 additional forward facing holes for anchor points)

Important note:
The frames are fixed and cannot be changed.

The rear module can be installed separately without the front module.
The front module can only be installed when the rear module is present.

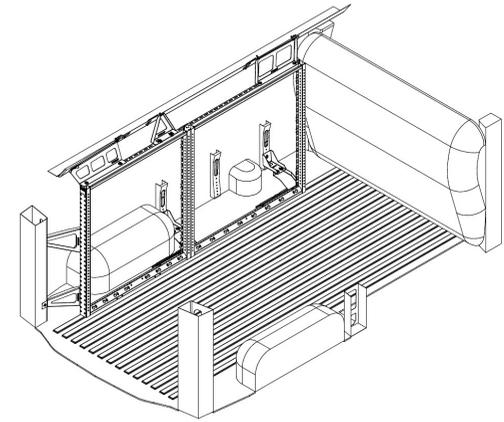

Rear door

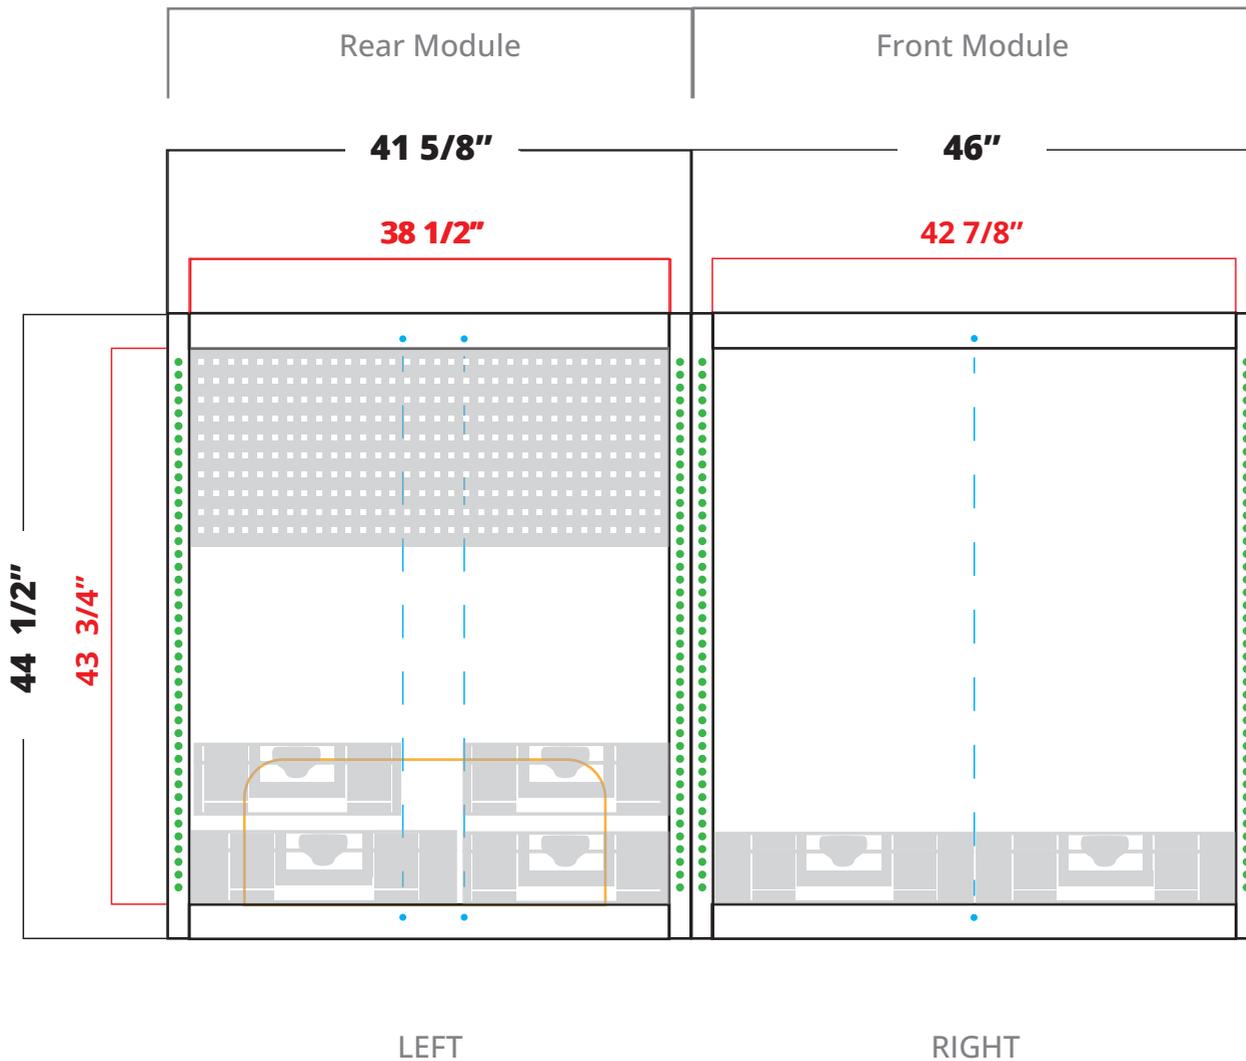


- | LEFT | Frame Fitting Options (3 variations) |
|--------------------------|--|
| <input type="checkbox"/> | 1. Use the full width of the frame
Fit accessories with 38 1/2" W |
| <input type="checkbox"/> | 2. Create 2 sections within the frame
Add (1) Divider to fit:
(1) L section 20 7/8" W
(1) M section 16 1/2" W |
| <input type="checkbox"/> | 3. Create 2 sections within the frame
Add (2) Dividers to fit:
(2) M sections 16 1/2" W |
| RIGHT | Frame Fitting Options (2 variations) |
| <input type="checkbox"/> | 1. Use the full width of the frame
Fit accessories with 42 7/8" W |
| <input type="checkbox"/> | 2. Create 2 sections within the frame
Add (1) Divider to fit:
(2) L sections 20 7/8" W |





Explore more on how to create your own layout with different frames, shelves, boxes and accessories by viewing the Van Guide.
bottsmartvan.com/van-shelving -- or Scan the QR Code

Call or email us to place your custom order. sales@bottsmartvan.com 1 (765) 535 7540



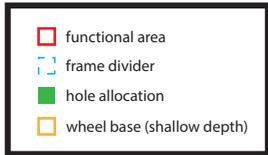


Rear door
←

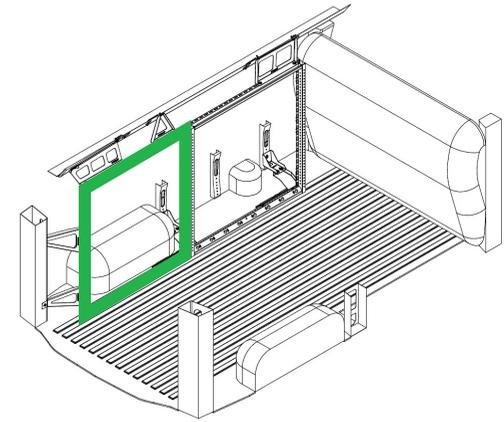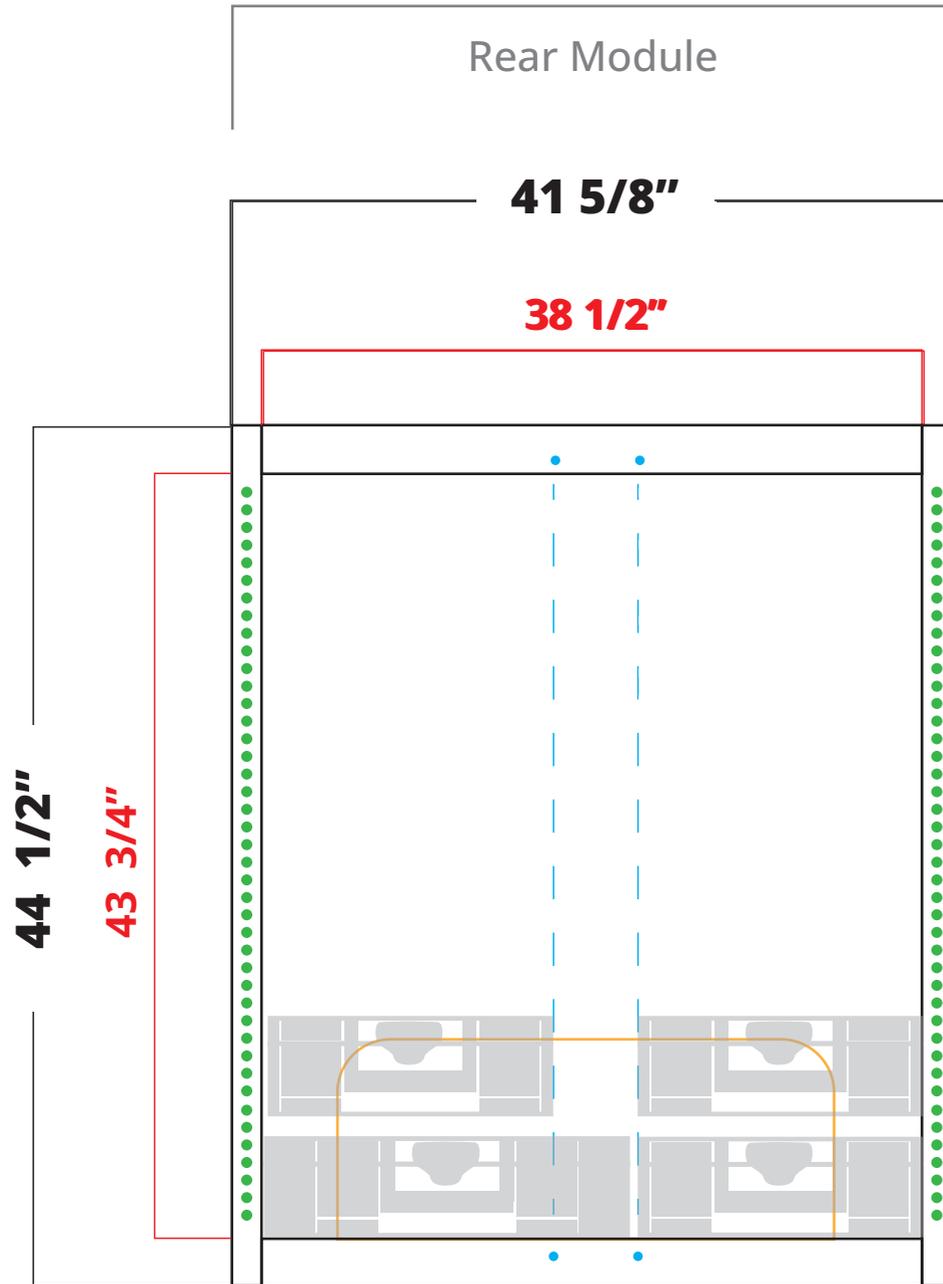



LEFT Frame Fitting Options (3 variations)

1. Use the full width of the frame
Fits accessories 38 1/2" W
2. Create 2 sections within the frame
Add (1) Divider to fit:
(1) L section 20 7/8" W
(1) M section 16 1/2" W
3. Create 2 sections within the frame
Add (2) Divider to fit:
(2) M section 16 1/2" W

LEFT

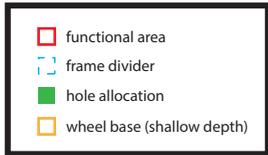

Rear door
←

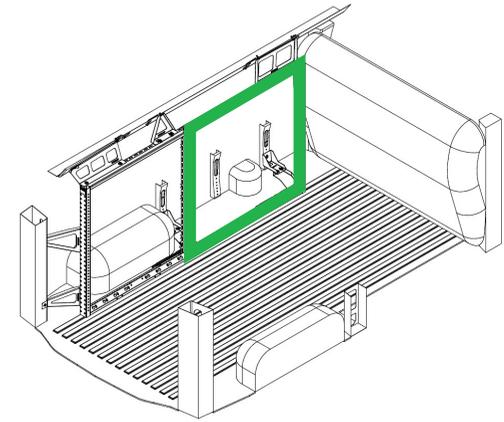
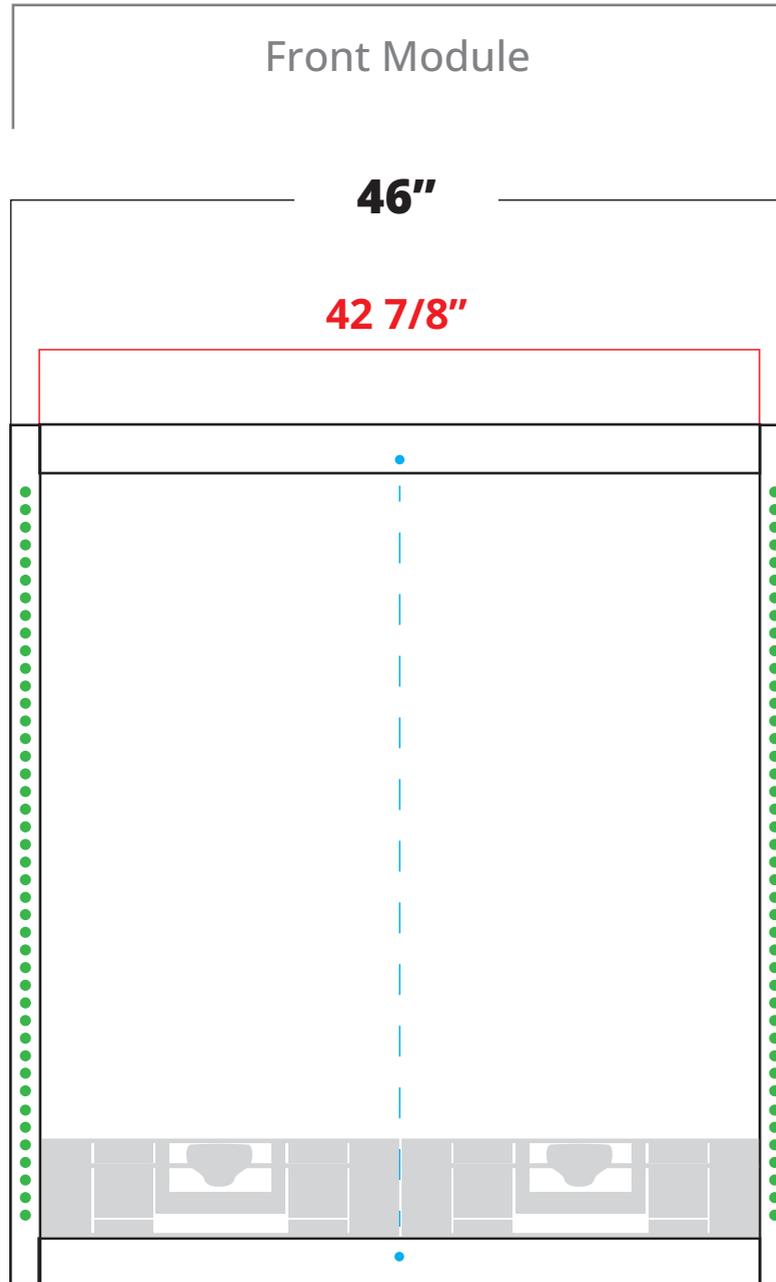


RIGHT Frame Fitting Options (2 variations)

1. Use the full width of the frame
Fits accessories 42 7/8" W
2. Create 2 sections within the frame
Add (1) Divider to fit:
(2) L section 20 7/8" W

Hole Allocations: 55 holes
(2 additional forward facing holes for anchor points)


Important note:
The frames are fixed and cannot be changed.

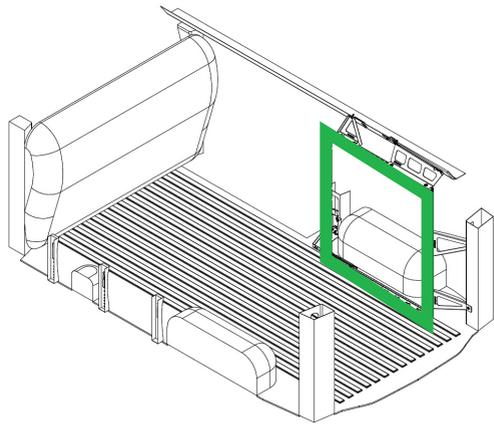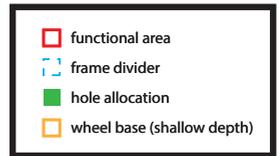

Rear door →

Frame Fitting Options
(3 variations)

- 1. Use the full width of the frame
Fit accessories with 38 1/2" W
- 2. Create 2 sections within the frame
Add (1) Divider to fit:
(1) L section 20 7/8" W
(1) M section 16 1/2" W
- 3. Create 2 sections within the frame
Add (2) Dividers to fit:
(2) M sections 16 1/2" W

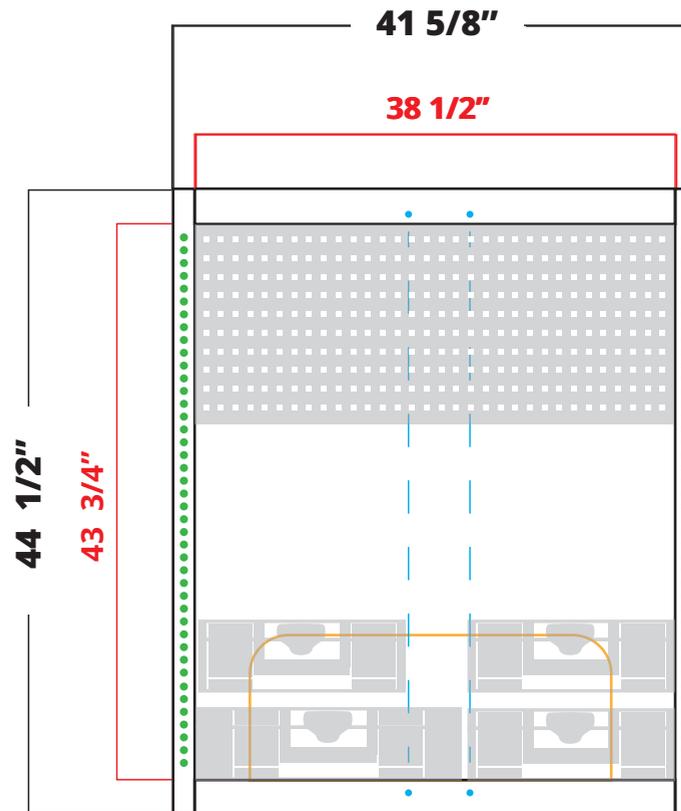

Explore more on how to create your own layout with different frames, shelves, boxes and accessories by viewing the Van Guide.
bottsmartvan.com/van-shelving -- or Scan the QR Code

Call or email us to place your custom order. sales@bottsmartvan.com 1 (765) 535 7540

